



- | | |
|--------------------------|----------------|
| 【MIC】 | 【STAND】 |
| SHURE SM58 × 12 | ST210 × 15 |
| SHURE SM57 × 12 | ST259 × 15 |
| SENHIZER MD421 × 5 | |
| SENHIZER E901 × 1 | |
| E/V ND468 × 5 | 【DI】 |
| AKG C-391 × 4 | BOSS DI-1 × 10 |
| audio-technica ATM25 × 1 | |

- Player**
CD(TASCAM)
DVD(PIONEER)