



- |                          |                |
|--------------------------|----------------|
| <b>【MIC】</b>             | <b>【STAND】</b> |
| SHURE SM58 × 10          | ST210 × 15     |
| SHURE SM57 × 10          | ST259 × 15     |
| SENHIZER MD421 × 3       |                |
| SENHIZER E901 × 1        |                |
| E/V ND468 × 5            | <b>【DI】</b>    |
| AKG C-391 × 4            | BOSS DI-1 × 10 |
| audio-technica ATM25 × 1 |                |

- Player  
CD(TASCAM)  
DVD(PIONEER)